

TRANSMISSION SERVICING - M/T

Article Text

1993 Volkswagen Corrado

For Volkswagen Technical Site: <http://vw.belcom.ru>

Copyright © 1998 Mitchell Repair Information Company, LLC

Wednesday, March 22, 2000 09:25PM

ARTICLE BEGINNING

1993 TRANSMISSION SERVICING
Volkswagen Manual Transmission

Volkswagen; Corrado SLC, Passat

IDENTIFICATION

MANUAL TRANSAXLE APPLICATIONS TABLE

Model Transaxle

Corrado 5-Speed - 02A Transaxle

Passat 5-Speed - 02A Transaxle

LUBRICATION

SERVICE INTERVALS

No oil changes are required.

CHECKING FLUID LEVEL

Manufacturer states that fluid level does not have to be checked, and does not specify a procedure for doing so.

RECOMMENDED FLUID

Use API GL-4, SAE 80W or 80W-90.

FLUID CAPACITIES

TRANSAXLE REFILL CAPACITIES TABLE

Transaxle Qts. (L)

02A 2.1 (2.0)

02B 2.9 (3.1)

013 & 014 1.8 (1.7)

020 2.1 (2.0)

ADJUSTMENTS

GEARSHIFT LINKAGE

1) Place gearshift lever in Neutral position. Remove knob and boot. Loosen bolt "A" and nut "B" sufficiently so that operating cables move freely in centering holes. See Fig. 1. Install Shift

TRANSMISSION SERVICING - M/T

Article Text (p. 2)

1993 Volkswagen Corrado


For Volkswagen Technical Site: <http://vw.belcom.ru>

Copyright © 1998 Mitchell Repair Information Company, LLC

Wednesday, March 22, 2000 09:25PM


Linkage Gauge (3193). Loosen bolt "C". See Fig. 2.

2) Pivot locating pin under bearing plate. Tighten nut "D". Place gearshift lever into left detent of slide. Move gearshift lever and slide together to left stop. Tighten slide with bolt "D". Move gearshift lever to right detent. Tighten bolt "E". Move gearshift lever to right detent. Tighten bolt "C".

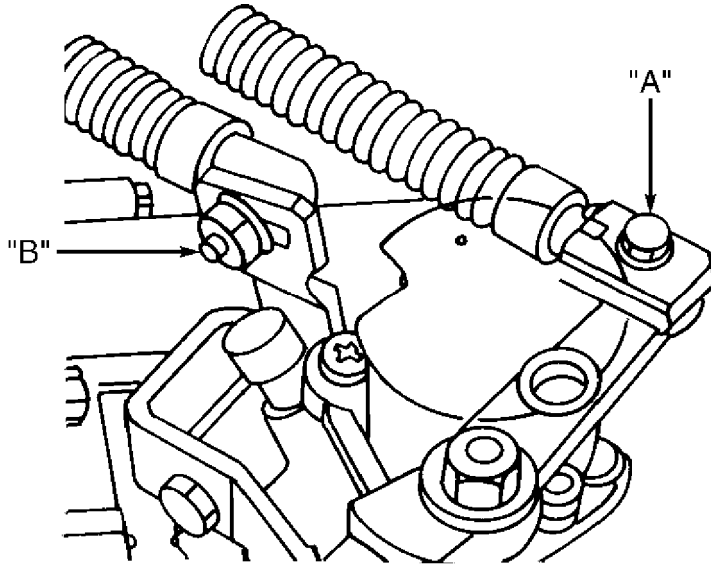

92G01413

Fig. 1: Identifying Centering Holes
Courtesy of Volkswagen United States, Inc.

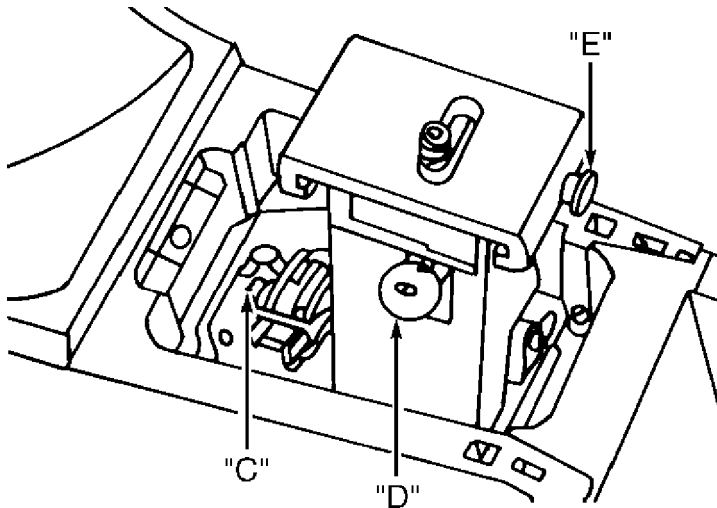

92I01414

Fig. 2: Installing Shift Linkage Gauge
Courtesy of Volkswagen United States, Inc.

END OF ARTICLE