

STARTER

Article Text

1993 Volkswagen Corrado

For Volkswagen Technical Site: <http://vw.belcom.ru>

Copyright © 1998 Mitchell Repair Information Company, LLC

Wednesday, March 22, 2000 09:23PM

ARTICLE BEGINNING

1993 ELECTRICAL

Volkswagen Starters - Bosch

Volkswagen; Corrado SLC, Passat

DESCRIPTION

Starter is a brush type, series-wound electric motor with an overrunning clutch. Field frame is enclosed by commutator end frame and drive bushing, and carries pole shoes and field coils. A splined armature shaft drive end carries drive assembly.

TROUBLE SHOOTING

NOTE: See TROUBLE SHOOTING - BASIC PROCEDURES article in GENERAL INFORMATION.

ON-VEHICLE TESTING

STARTER DOES NOT CRANK ENGINE

1) Ensure battery is fully charged. Make sure electrical and ground connections are clean and tight. With ignition switch in START position, measure voltage at spade terminal of starter solenoid. Reading should be at least 8 volts. If voltage is as specified, check engine for mechanical problems. If voltage is not as specified, go to next step.

2) Measure voltage at ignition switch. If reading is at least 8 volts, check wiring between ignition switch and starter solenoid. If voltage is not as specified, replace ignition switch.

3) Measure voltage at field (starter) terminal of starter solenoid. If reading is 8 volts or more, repair or replace starter. If reading is less than 8 volts, replace starter solenoid.

NOTE: On vehicles with automatic transmission, also check park/neutral switch.

STARTER CRANKS TOO SLOWLY

Ensure engine crankcase is filled with recommended viscosity oil. Check charging system to ensure battery is fully charged. Make sure electrical and ground connections are clean and tight. If starter still turns slowly, repair or replace starter.

VOLTAGE DROP TEST

Starter Main Terminal

Connect a voltmeter between starter main terminal and starter body. Disconnect ignition coil positive terminal and operate starter.

STARTER

Article Text (p. 2)

1993 Volkswagen Corrado

For Volkswagen Technical Site: <http://vw.belcom.ru>

Copyright © 1998 Mitchell Repair Information Company, LLC

Wednesday, March 22, 2000 09:23PM

Voltage reading should not be more than one volt less than battery voltage. If a larger voltage drop is indicated, circuit between battery and starter terminal may be defective.

Main Starter Case

Connect a voltmeter between positive battery terminal and starter motor "M" terminal. With ignition off, operate starter for 2-3 seconds. Battery voltage should be present, then drop to less than one volt. If voltage is greater than specification, high resistance may be present in circuit. Go to ACROSS SOLENOID SWITCH test.

Across Solenoid Switch

Connect a voltmeter between 2 starter solenoid terminal stud connections. With ignition disconnected, operate starter for 2-3 seconds and note meter reading. Initially, battery voltage should be present, then voltage should drop to less than .5 volt. If voltage is not as specified, check for damaged switch or loose or dirty connections. If high resistance is present, terminal may be loose or corroded.

Ground Return Line

Connect a voltmeter between battery ground terminal and starter main housing. With ignition off, operate starter for 2-3 seconds. If ground is okay, voltage reading should be less than .5 volt. If reading is .6 volt or more, high resistance is present in ground return side of circuit.

BENCH TESTING

STARTER SOLENOID

1) Remove bridge strap connecting solenoid to motor. Check windings by connecting a 12-volt self-powered test light between solenoid main terminal STA and solenoid body. If light illuminates, both windings are satisfactory.

2) Ensure that contacts open and close satisfactorily by connecting a 12-volt self-powered test light between starter solenoid main terminals. Test light should not illuminate.

NOTE: Step 3) uses a non-powered (standard) test light.

3) Connect a test light to STARTER terminal of solenoid and ground. Apply voltage to STA and BAT terminals of solenoid. Solenoid should be heard to operate as contacts close and test light should illuminate. When voltage is removed from STA terminal of solenoid, test light should go out.

STARTER LOAD (LOCK) TEST

With starter on test bench, lock starter drive pinion. Voltmeter should read 4.5 volts and ammeter should read 700-800 amps.

STARTER

Article Text (p. 3)

1993 Volkswagen Corrado

For Volkswagen Technical Site: <http://vw.belcom.ru>

Copyright © 1998 Mitchell Repair Information Company, LLC

Wednesday, March 22, 2000 09:23PM

STARTER NO-LOAD TEST

With starter on test bench, operate starter and check ammeter, voltage, and RPM. Readings should be within specification. See STARTER NO-LOAD TEST SPECIFICATIONS table.

STARTER NO-LOAD TEST SPECIFICATIONS TABLE

AA

| Volts | Amps | RPM |
|-------|------|-----|
|-------|------|-----|

| | | |
|------------|-------------|------|
| 11.5 | 65-95 | 6500 |
|------------|-------------|------|

AA

REMOVAL & INSTALLATION


CORRADO SLC & PASSAT

CAUTION: Failure to use Support Beam (VW 10-222A) and Leg Set (VW 10-222A/1) may result in misalignment of engine/transmission assembly.

Removal & Installation

1) Disconnect negative battery cable. Support engine/transmission assembly with Support Beam (VW 10-222A) and Leg Set (VW 10-222A/1). See Fig. 1. Remove engine mount bolts. Remove rubber engine mount lower nut and clamp screw. Remove engine mount.

2) On Passat, cut and remove starter and alternator wiring harness tie straps. On all models, disconnect wiring and remove starter. To install, reverse removal procedure. Tighten starter mounting bolts/nuts to specification. See TORQUE SPECIFICATIONS table at end of article.

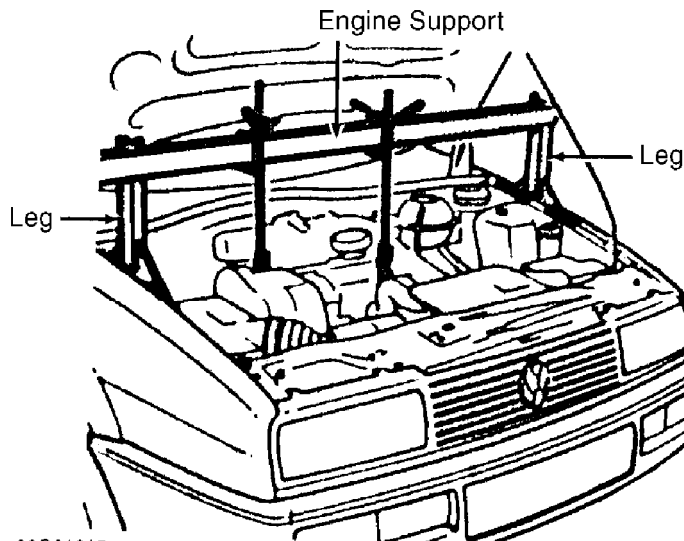

92G01615

Fig. 1: Removing Starter (Corrado SLC, Passat)

Courtesy of Volkswagen United States, Inc.

STARTER

Article Text (p. 4)

1993 Volkswagen Corrado

For Volkswagen Technical Site: <http://vw.belcom.ru>

Copyright © 1998 Mitchell Repair Information Company, LLC

Wednesday, March 22, 2000 09:23PM

OVERHAUL

For overhaul, see exploded view of typical Bosch starter. See Fig. 2.

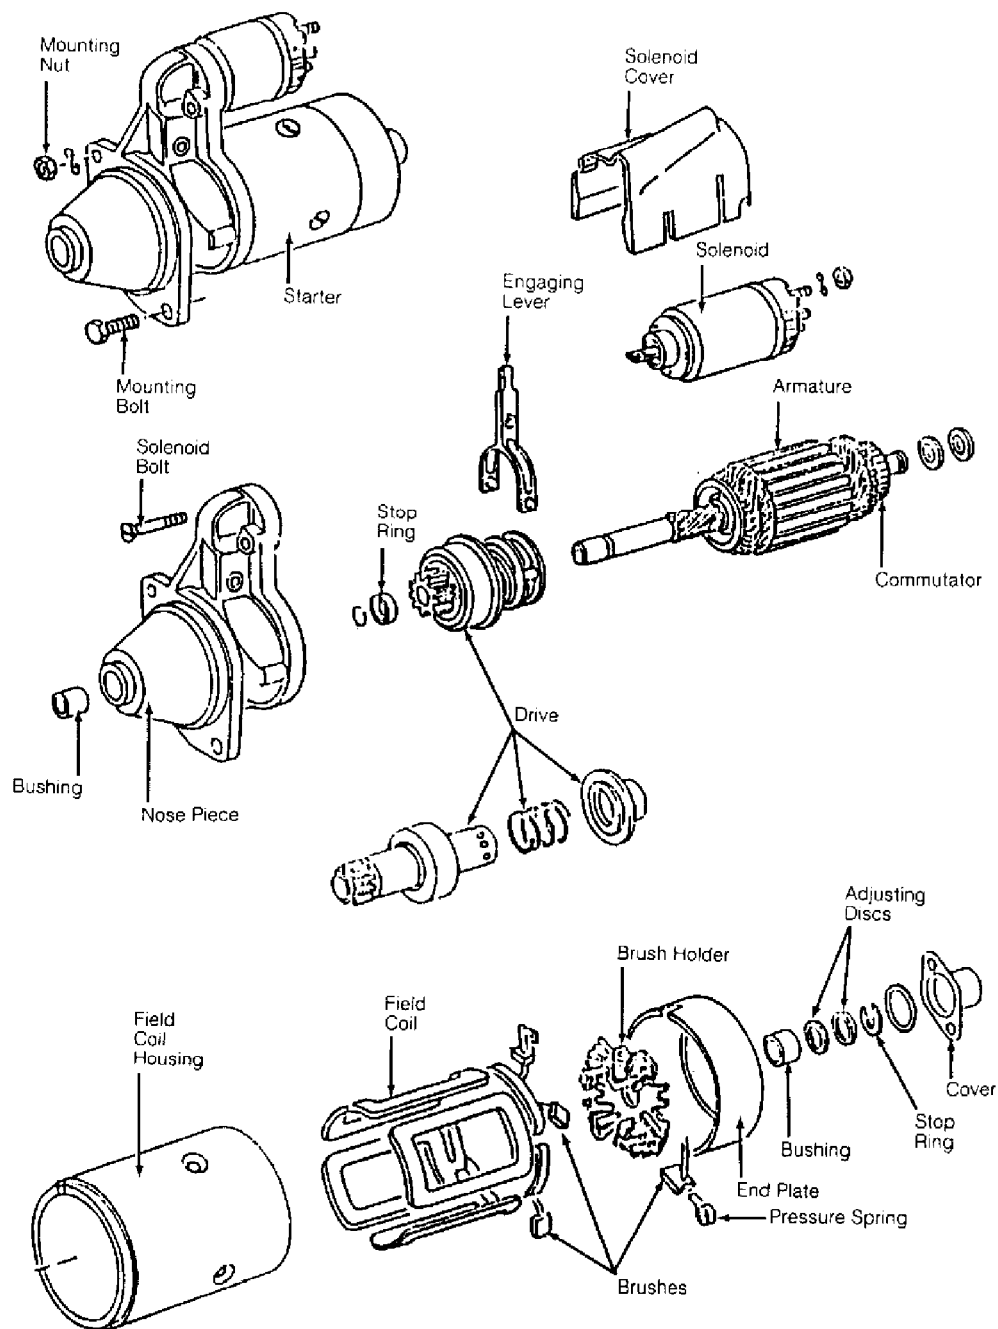


Fig. 2: Exploded View of Bosch Starter (Typical)
Courtesy of Volkswagen United States, Inc.

STARTER

Article Text (p. 5)

1993 Volkswagen Corrado

For Volkswagen Technical Site: <http://vw.belcom.ru>

Copyright © 1998 Mitchell Repair Information Company, LLC

Wednesday, March 22, 2000 09:23PM

STARTER SPECIFICATIONS

STARTER SPECIFICATIONS TABLE

AA

| Application | Specification |
|-------------|---------------|
|-------------|---------------|

Armature

| | |
|--------------|----------------|
| Runout | .002" (.05 mm) |
|--------------|----------------|

| | |
|----------------|----------------|
| End Play | .002" (.05 mm) |
|----------------|----------------|

Cold Cranking

| | |
|--------------------|----|
| Test Voltage | 12 |
|--------------------|----|

| | |
|-----------------------|---|
| Minimum Voltage | 9 |
|-----------------------|---|

| | |
|------------|----|
| Amps | 90 |
|------------|----|

| | |
|-------------------|------|
| Minimum RPM | 1500 |
|-------------------|------|

| | |
|--|-----------------|
| Solenoid Hold-In Winding Voltage | 4 Volts Minimum |
|--|-----------------|

| | |
|--|---------|
| Solenoid Pull-In Winding Voltage | 7 Volts |
|--|---------|

| | |
|-------------------------|-----------------|
| Commutator Runout | .0004" (.01 mm) |
|-------------------------|-----------------|

| | |
|------------------------|-----------------|
| Cranking Voltage | 9 Volts Minimum |
|------------------------|-----------------|

| | |
|----------------------------|------------------|
| Starter Current Draw | 170 Amps Maximum |
|----------------------------|------------------|

AA

TORQUE SPECIFICATIONS

TORQUE SPECIFICATIONS TABLE

AA

| Application | Ft. Lbs. (N.m) |
|-------------|----------------|
|-------------|----------------|

Starter-To-Block Bolt/Nut

| | |
|---------------------------|---------|
| Corrado SLC, Passat | 44 (60) |
|---------------------------|---------|

INCH Lbs. (N.m)

| | |
|----------------------|---------|
| Solenoid Bolts | 96 (11) |
|----------------------|---------|

| | |
|---------------------|--------|
| Through Bolts | 54 (6) |
|---------------------|--------|

AA

END OF ARTICLE