

1996 Volkswagen Golf
For Volkswagen Technical Site
Copyright © 1998 Mitchell Repair Information Company, LLC
Thursday, August 19, 1999 11:19PM

ARTICLE BEGINNING

1996 ELECTRICAL COMPONENT LOCATION

Volkswagen Electrical Components - 2.0L 4-Cyl.

Cabri o, Golf III, Jetta III

SAFETY PRECAUTION

WARNING: When working on vehicles equipped with Supplemental Restraint System (SRS), never apply electrical voltage to the system. This could cause the SRS (air bag) to be deployed.

BUZZERS, RELAYS & TIMERS

Diagram of the Fuse/Relay Panel:

Component Location

Component	Location
1. A/C Relay	Relay 1
2. Rear Window Wiper/Washer Relay	Relay 2
3. ECM Power Supply Relay	Relay 3
4. Load Reduction Relay	Relay 4
5. Not Used	Relay 5
6. Emergency Flasher Relay	Relay 6
7. Not Used	Relay 7
8. Wiper/Washer Intermittent Relay	Relay 8
9. Seat Belt Warning System Relay	Relay 9
10. Fog Lamp Relay	Relay 10
11. Dual-Horn Relay or Bridge For Horn	Relay 11
12. Fuel Pump Relay	Relay 12
13. Heated Oxygen Sensor Control Module	Relay 13
14. Park/Neutral Position Relay	Relay 14
15. ABS Hydraulic Pump Relay	Relay 15
16. ABS Relay	Relay 16

Fuse/Relay Panel

Fuse Number	Fuse Rating
1	10A
2	10A
3	10A
4	15A
5	15A
6	20A
7	10A
8	10A
9	20A
10	15A
11	10A
12	10A
13	10A
14	10A
15	10A
16	15A
17	10A
18	20A
19	30A
20	10A
21	15A
22	10A

ABS Relay

96D03793

On fuse/relay panel.

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 2)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, August 19, 1999 11:19PM

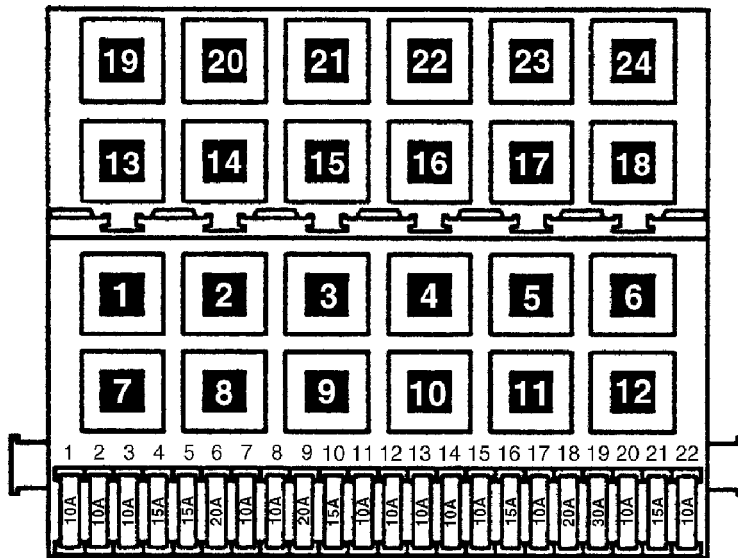


1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

96D03793
ABS Hydraulic Pump Relay

On fuse/relay panel.

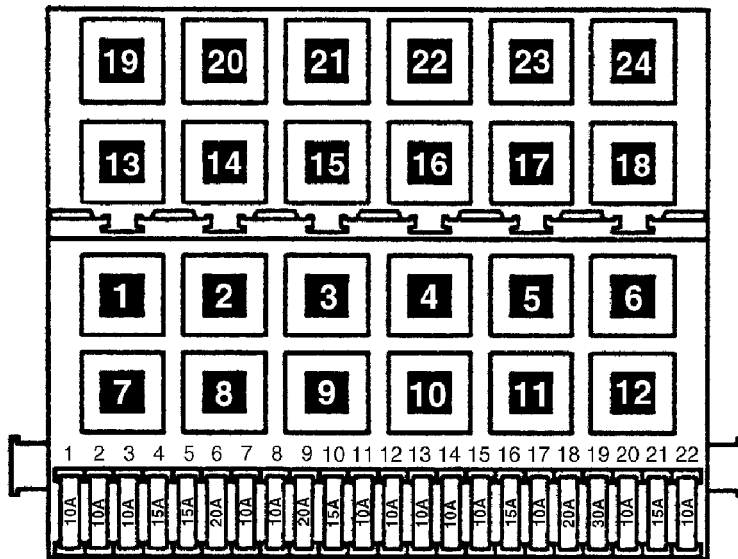

1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

A/C Relay

96D03793

On fuse/relay panel.

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 3)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, August 19, 1999 11:19PM

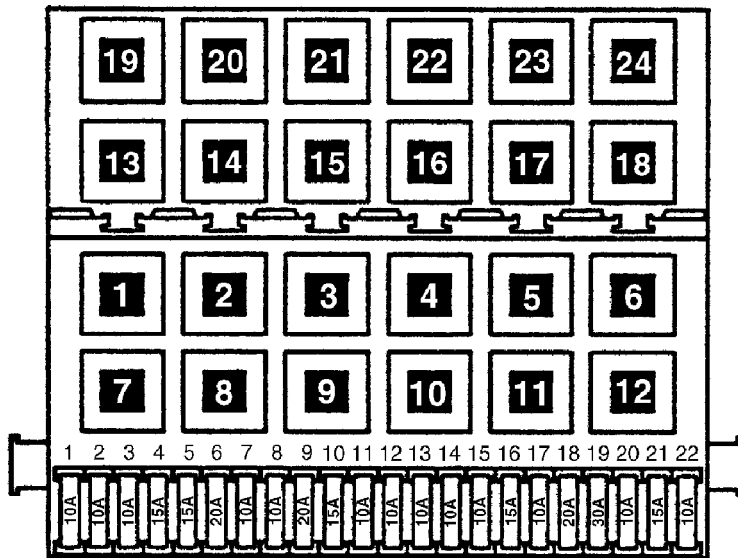


1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

96D03793
Dual - Horn Relay

On fuse/relay panel.

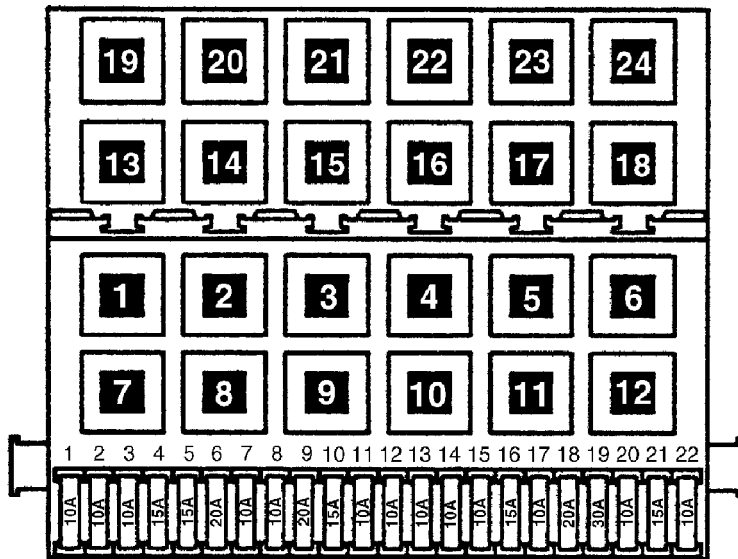

1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

96D03793
ECM Power Supply Relay

On fuse/relay panel.

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 4)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, August 19, 1999 11:19PM

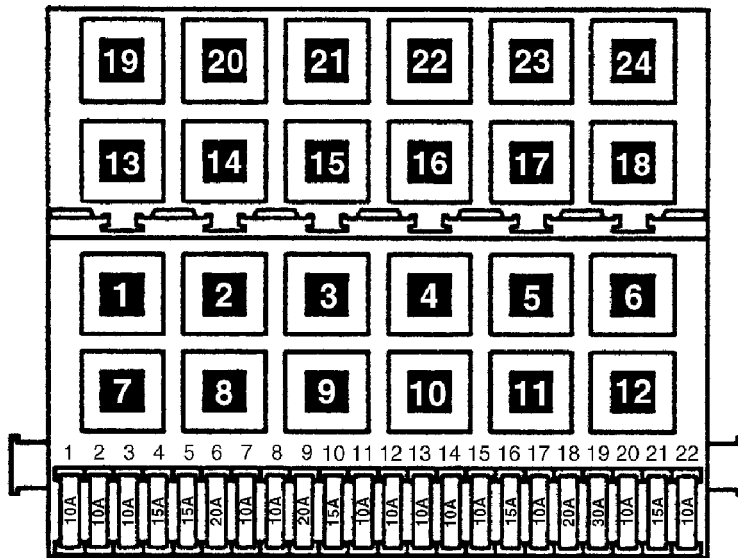


1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

96D03793
Emergency Flasher Relay

On fuse/relay panel.

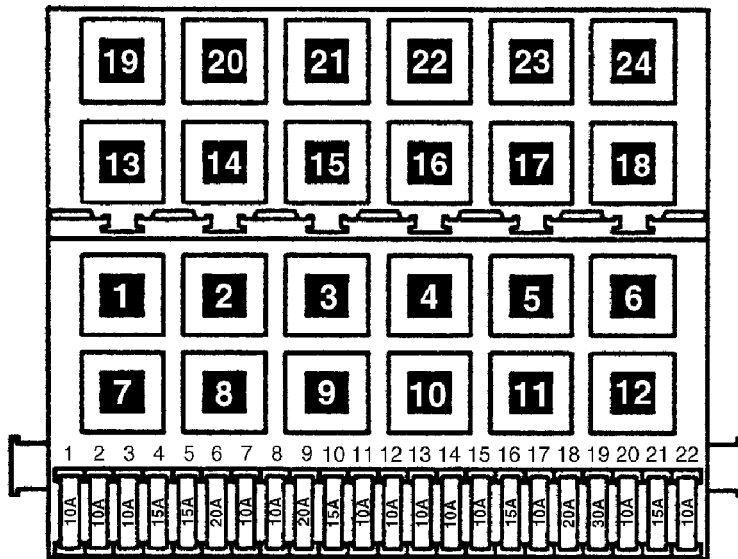

1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

96D03793
Fog Lamp Relay

On fuse/relay panel.

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 5)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, August 19, 1999 11:19PM

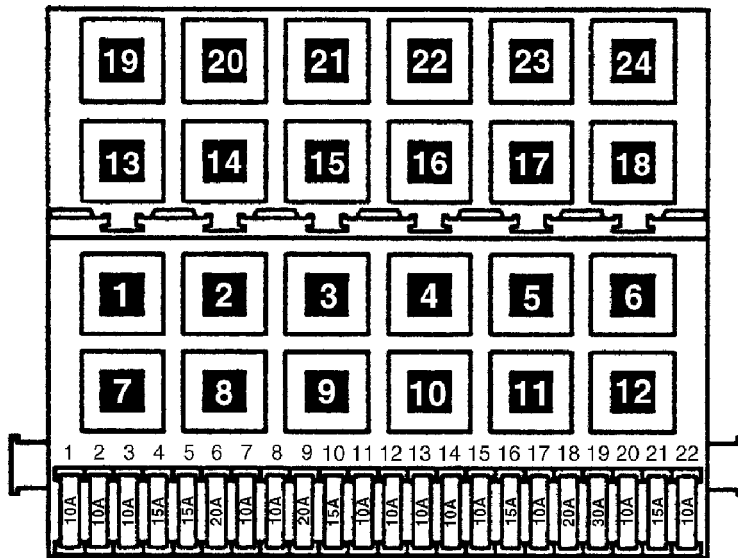


1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

96D03793
Fuel Pump Relay

On fuse/relay panel.

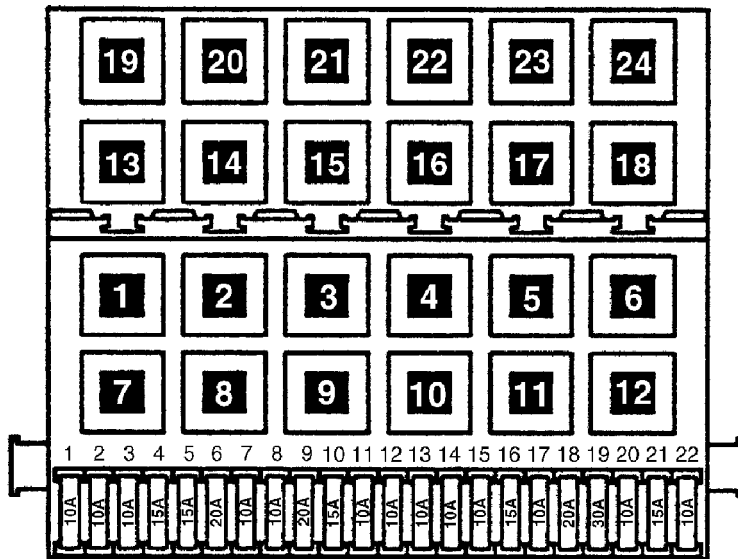

1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

96D03793
Load Reduction Relay

On fuse/relay panel.

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 6)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, August 19, 1999 11:19PM

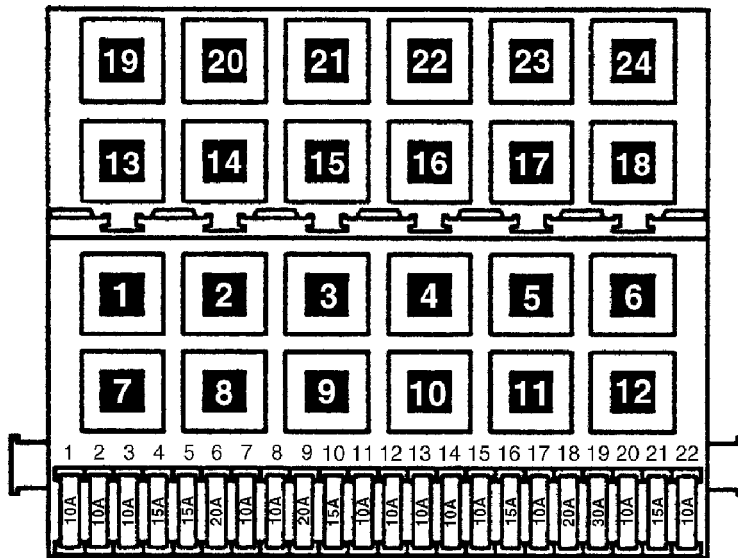


1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

96D03793
Park/Neutral Position Relay

On fuse/relay panel.

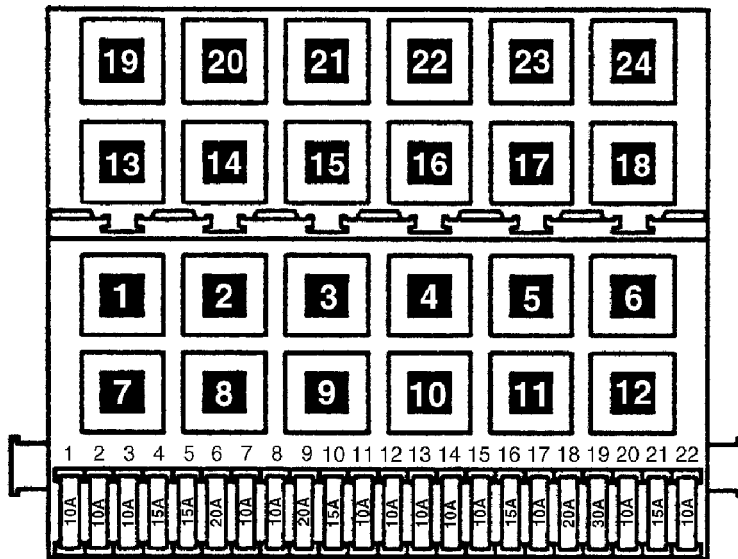

1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

96D03793
Rear Window Wiper/Washer Relay

On fuse/relay panel.

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 7)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, August 19, 1999 11:19PM

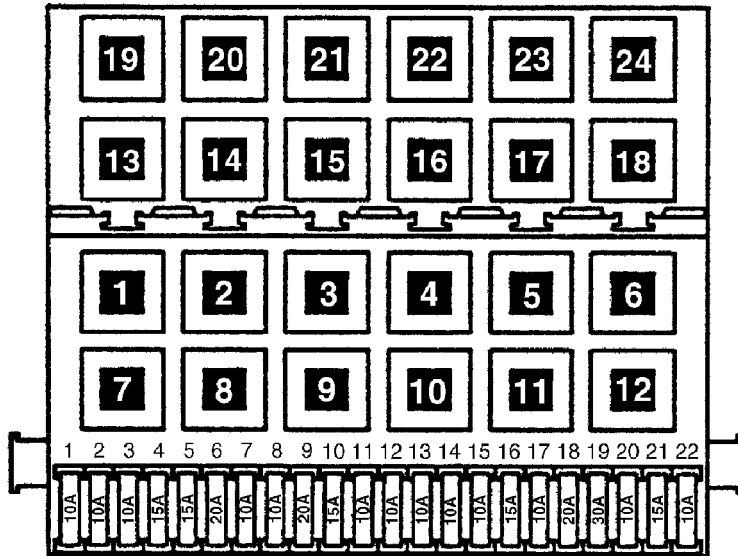


1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

96D03793
Seat Belt Warning System
Relay

On fuse/relay panel.

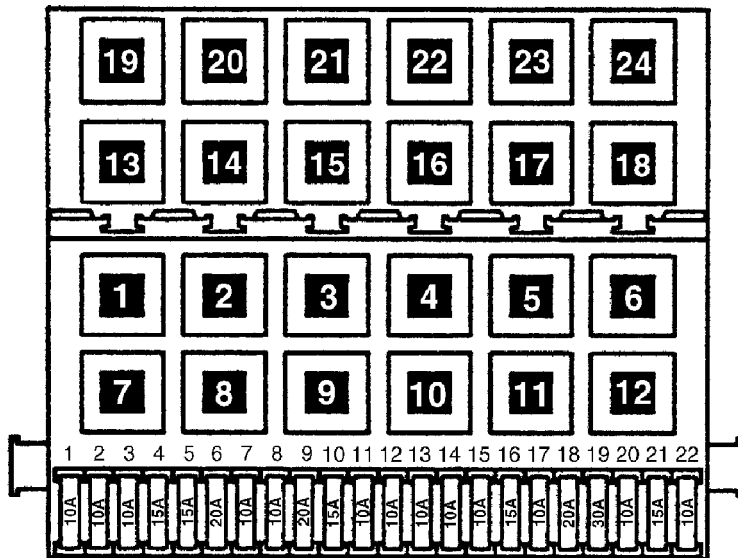

1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

96D03793
Wiper/Washer Intermittent
Relay

On fuse/relay panel.

AA

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL

Article Text (p. 8)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, August 19, 1999 11:19PM


Component	Component Location
Fuse/Relay Panel	Under left side of dash.

CONTROL UNITS

Component	Component Location
ABS Control Module	Left side of engine compartment.

Alarm System Control Module	Behind left side of dash, above fuse/relay panel.
-----------------------------	--

Coolant Fan Control Unit	Left side of engine compartment.
--------------------------	----------------------------------

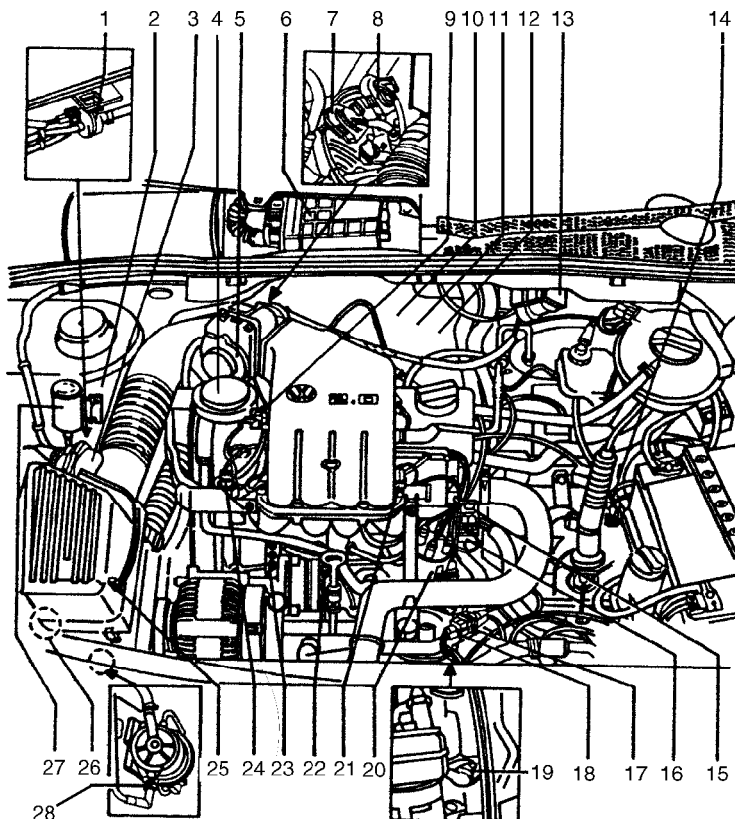

1. EVAP Canister Purge Regulator Valve
2. EGR Vacuum Regulator Valve (1995)
3. Mass Air Flow Sensor
4. Throttle Position Sensor (1995)
5. Throttle Valve Control Module (1996)
6. Engine Control Module
7. Heated Oxygen Sensor Connector (1996)
8. Heated Oxygen Sensor Connector (1996)
9. Intake Air Temperature Sensor
10. Idle Air Control Valve (1995)
11. EGR Temperature Sensor (1995)
12. EGR Valve (1995)
13. Ignition Coil
14. Vehicle Speed Sensor
15. Engine Coolant Temperature Sensor
16. Central Connector
17. Knock Sensor Connector (3-Pin)
18. Engine Speed Sensor Connector (3-Pin)
19. Engine Speed Sensor
20. Distributor (Camshaft Position Sensor)
21. Fuel Injectors
22. Knock Sensor 1
23. Ground
24. Fuel Pressure Regulator
25. Temperature Regulator Thermal Vacuum Valve
26. EVAP Canister
27. Leak Diagnosis Pump Filter (1996)
28. Leak Diagnosis Pump (1996)

96F03794
Engine Control Module

In engine compartment, on
center of plenum.

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 9)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, August 19, 1999 11:19PM

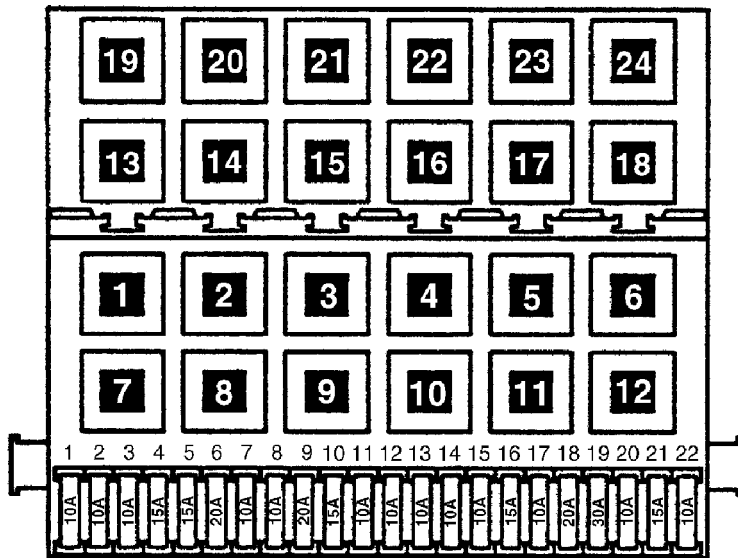


1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

Fuse/Relay Panel

96D03793

Heated Oxygen Sensor Control
Module

On fuse/relay panel.

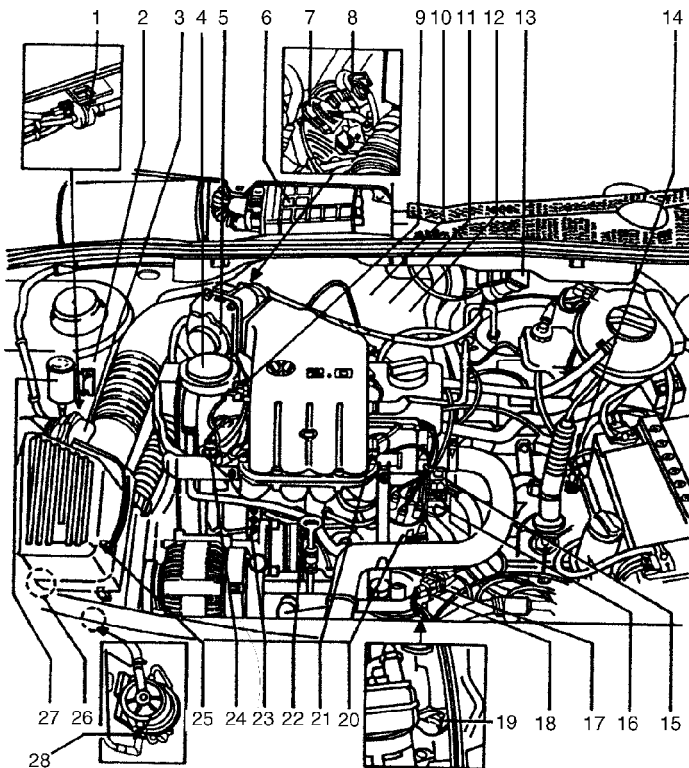

1. EVAP Canister Purge Regulator Valve
2. EGR Vacuum Regulator Valve (1995)
3. Mass Air Flow Sensor
4. Throttle Position Sensor (1995)
5. Throttle Valve Control Module (1996)
6. Engine Control Module
7. Heated Oxygen Sensor Connector (1996)
8. Heated Oxygen Sensor Connector (1996)
9. Intake Air Temperature Sensor
10. Idle Air Control Valve (1995)
11. EGR Temperature Sensor (1995)
12. EGR Valve (1995)
13. Ignition Coil
14. Vehicle Speed Sensor
15. Engine Coolant Temperature Sensor
16. Central Connector
17. Knock Sensor Connector (3-Pin)
18. Engine Speed Sensor Connector (3-Pin)
19. Engine Speed Sensor
20. Distributor (Camshaft Position Sensor)
21. Fuel Injectors
22. Knock Sensor 1
23. Ground
24. Fuel Pressure Regulator
25. Temperature Regulator Thermal Vacuum Valve
26. EVAP Canister
27. Leak Diagnosis Pump Filter (1996)
28. Leak Diagnosis Pump (1996)

96F03794

Throttle Valve Control Module

Right rear side of engine
compartment.

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL

Article Text (p. 10)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC


Thursday, August 19, 1999 11:19PM

Transmission Control Module

Below rear seat.

MOTORS

Component Component Location

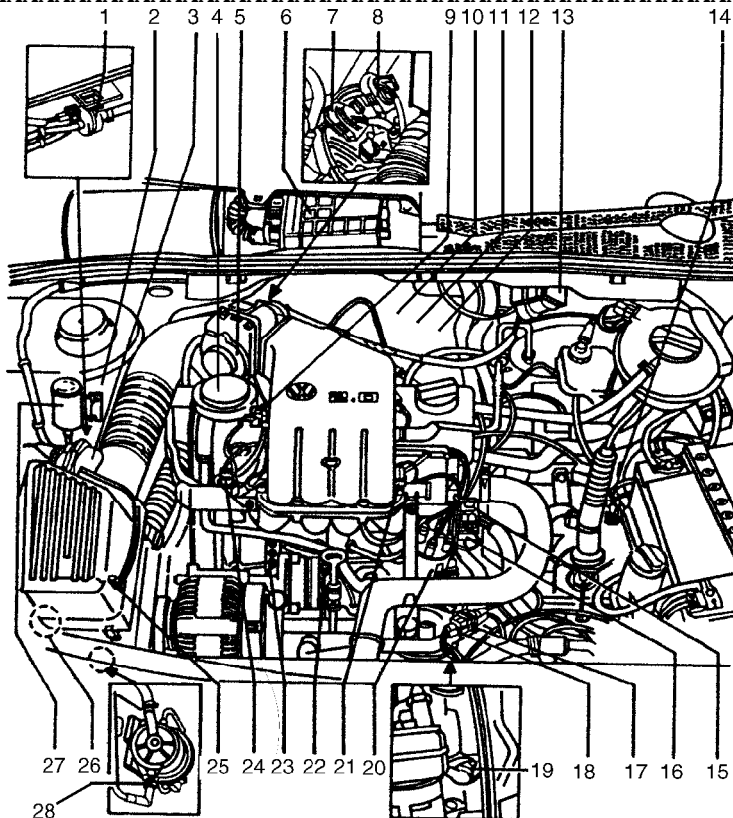

1. EVAP Canister Purge Regulator Valve
2. EGR Vacuum Regulator Valve (1995)
3. Mass Air Flow Sensor
4. Throttle Position Sensor (1995)
5. Throttle Valve Control Module (1996)
6. Engine Control Module
7. Heated Oxygen Sensor Connector (1996)
8. Heated Oxygen Sensor Connector (1996)
9. Intake Air Temperature Sensor
10. Idle Air Control Valve (1995)
11. EGR Temperature Sensor (1995)
12. EGR Valve (1995)
13. Ignition Coil
14. Vehicle Speed Sensor
15. Engine Coolant Temperature Sensor
16. Central Connector
17. Knock Sensor Connector (3-Pin)
18. Engine Speed Sensor Connector (3-Pin)
19. Engine Speed Sensor
20. Distributor (Camshaft Position Sensor)
21. Fuel Injectors
22. Knock Sensor 1
23. Ground
24. Fuel Pressure Regulator
25. Temperature Regulator Thermal Vacuum Valve
26. EVAP Canister
27. Leak Diagnosis Pump Filter (1996)
28. Leak Diagnosis Pump (1996)

96F03794
Leak Diagnosis Pump

Right front corner of engine compartment.

SENDING UNITS & SENSORS

Component Component Location

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 11)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC


Thursday, August 19, 1999 11:19PM

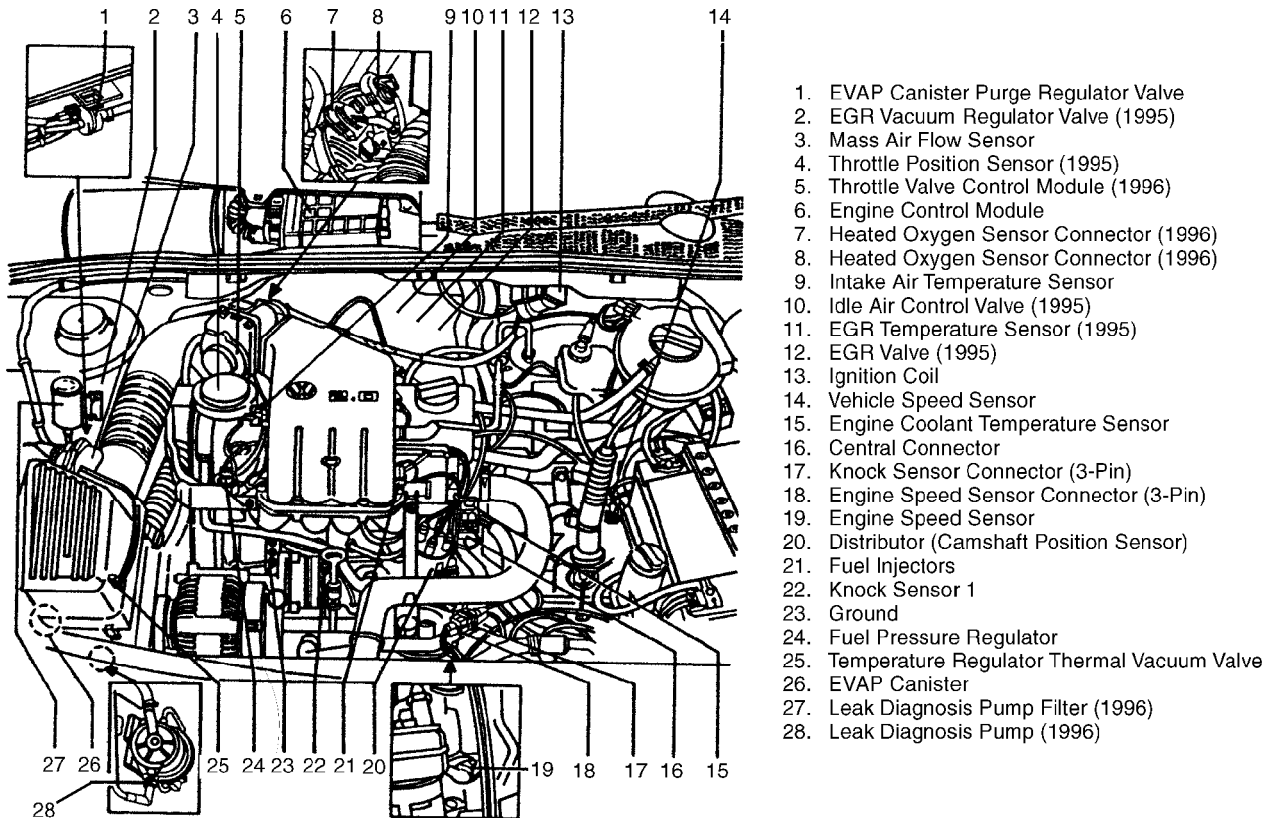

96F03794

Camshaft Position Sensor

Front center of engine compartment, in distributor.

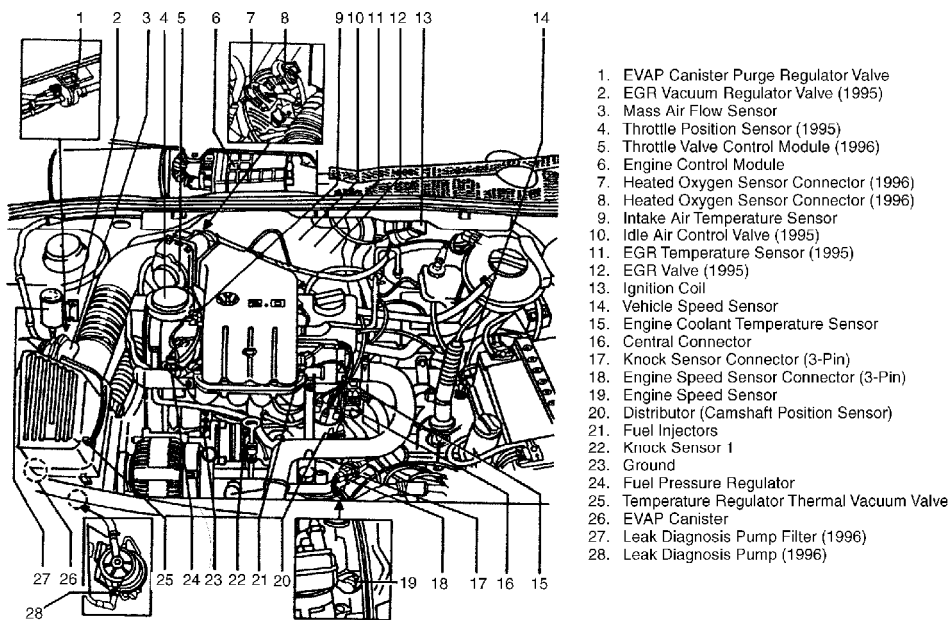

96F03794

Engine Coolant Temperature Sensor

Front center of engine compartment, near distributor.

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 12)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC


Thursday, August 19, 1999 11:19PM

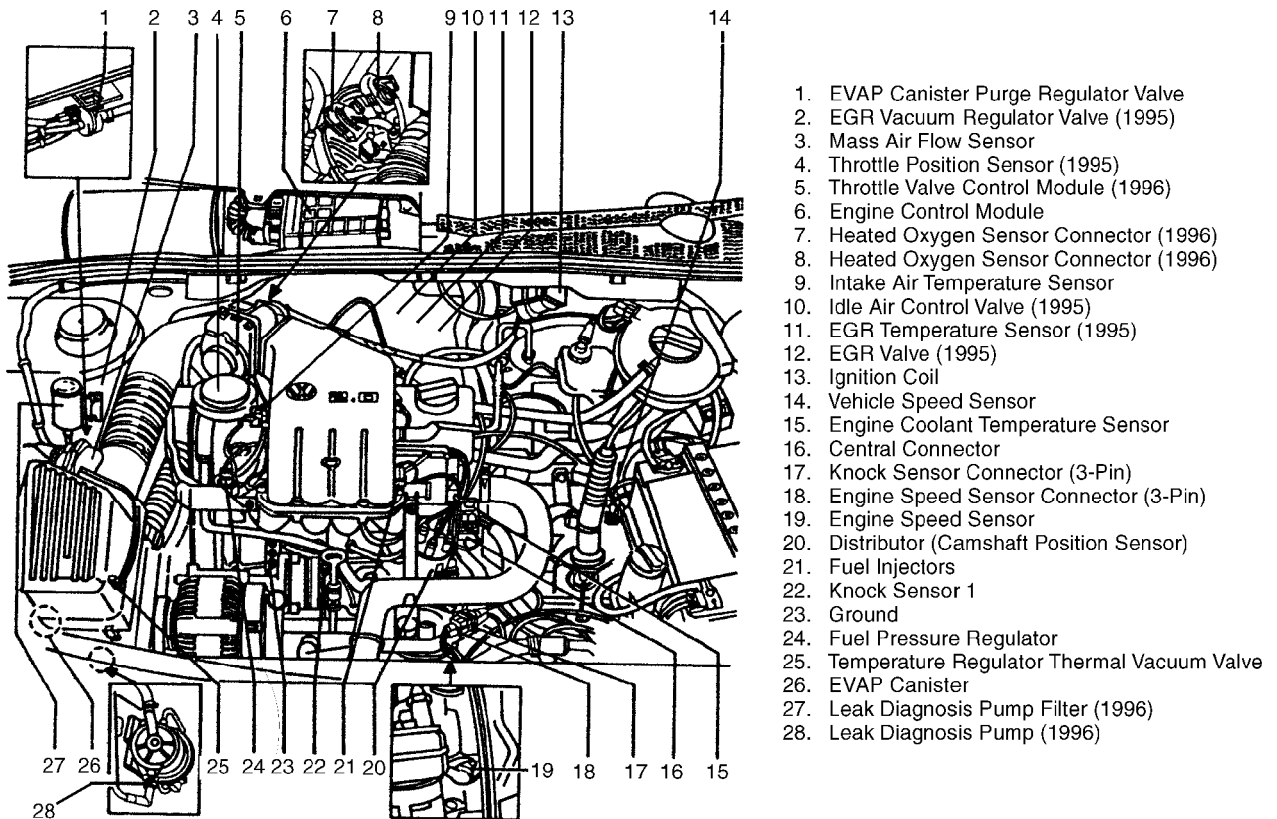

96F03794

Engine Speed Sensor

Front center of engine compartment.

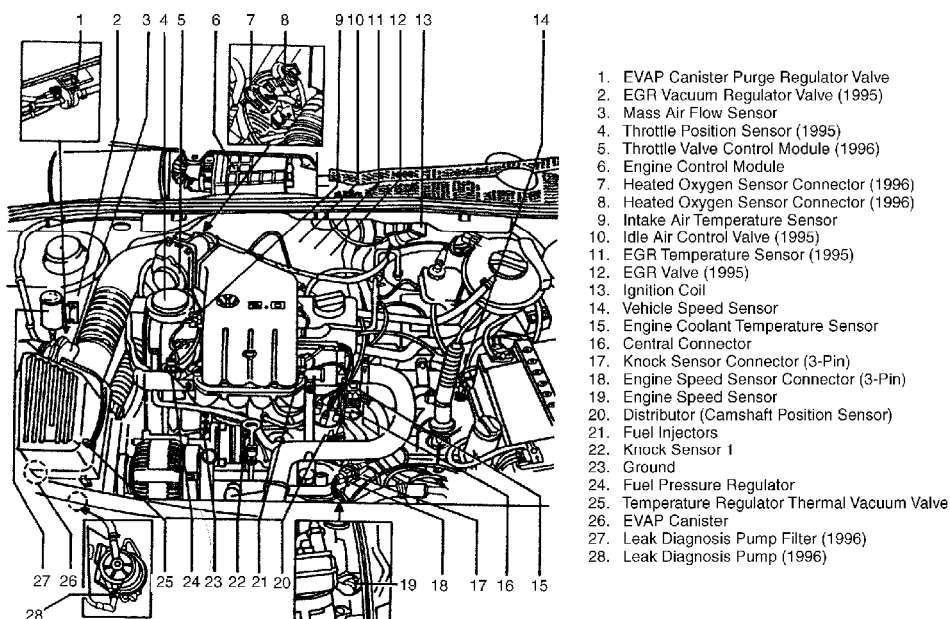

96F03794

Heated Oxygen Sensor Connector (2)

Right rear of engine

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL

Article Text (p. 13)


1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, August 19, 1999 11:19PM

compartment.

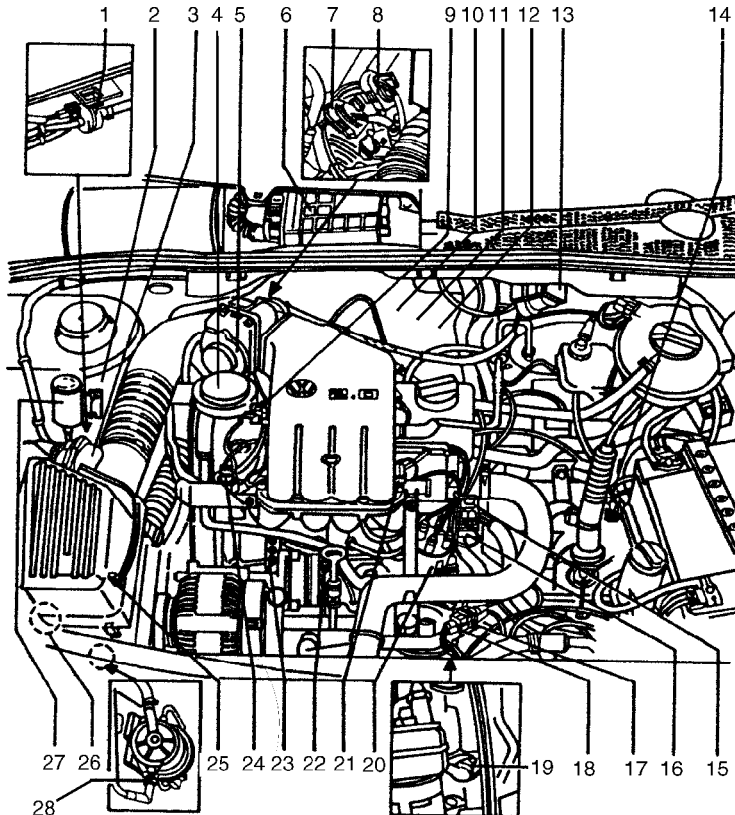

1. EVAP Canister Purge Regulator Valve
2. EGR Vacuum Regulator Valve (1995)
3. Mass Air Flow Sensor
4. Throttle Position Sensor (1995)
5. Throttle Valve Control Module (1996)
6. Engine Control Module
7. Heated Oxygen Sensor Connector (1996)
8. Heated Oxygen Sensor Connector (1996)
9. Intake Air Temperature Sensor
10. Idle Air Control Valve (1995)
11. EGR Temperature Sensor (1995)
12. EGR Valve (1995)
13. Ignition Coil
14. Vehicle Speed Sensor
15. Engine Coolant Temperature Sensor
16. Central Connector
17. Knock Sensor Connector (3-Pin)
18. Engine Speed Sensor Connector (3-Pin)
19. Engine Speed Sensor
20. Distributor (Camshaft Position Sensor)
21. Fuel Injectors
22. Knock Sensor 1
23. Ground
24. Fuel Pressure Regulator
25. Temperature Regulator Thermal Vacuum Valve
26. EVAP Canister
27. Leak Diagnosis Pump Filter (1996)
28. Leak Diagnosis Pump (1996)

96F03794

Intake Air Temperature Sensor

Right center of engine
compartment.

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 14)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC


Thursday, August 19, 1999 11:19PM

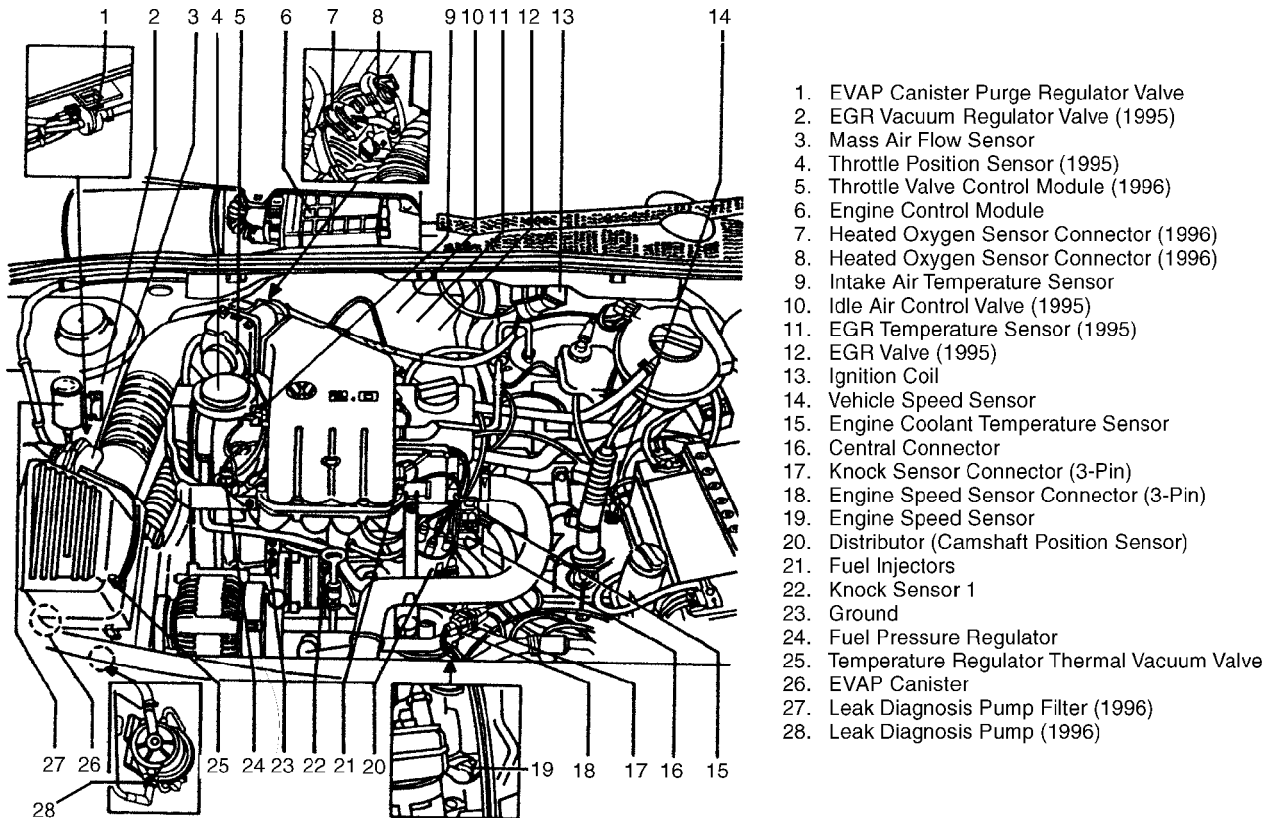

96F03794

Knock Sensor 1

On left side of engine block,
front center of engine
compartment.

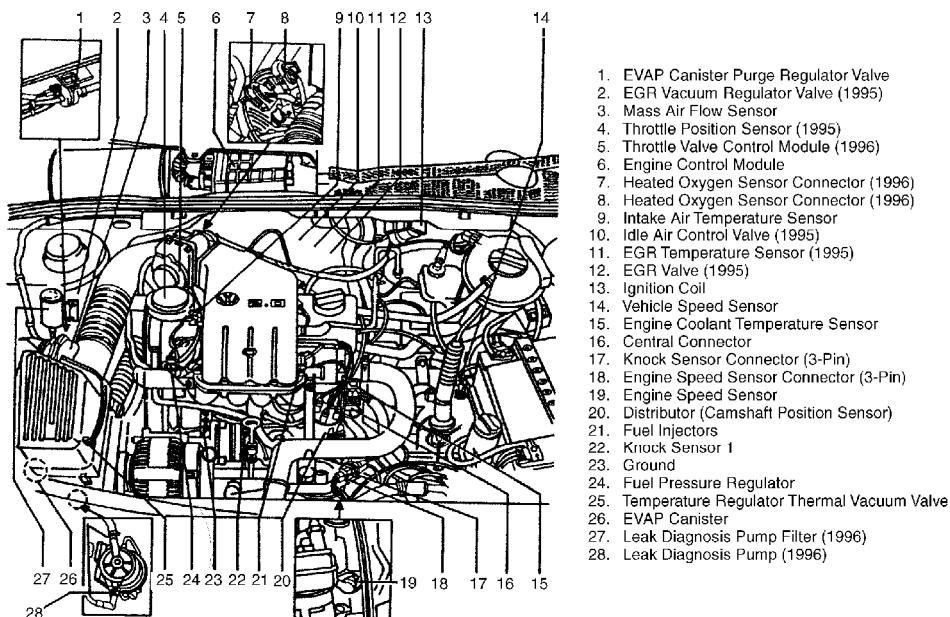


96F03794

Mass Air Flow Sensor

On right side of engine
compartment, on intake air

Thursday, August 19, 1999 11:19PM

duct.

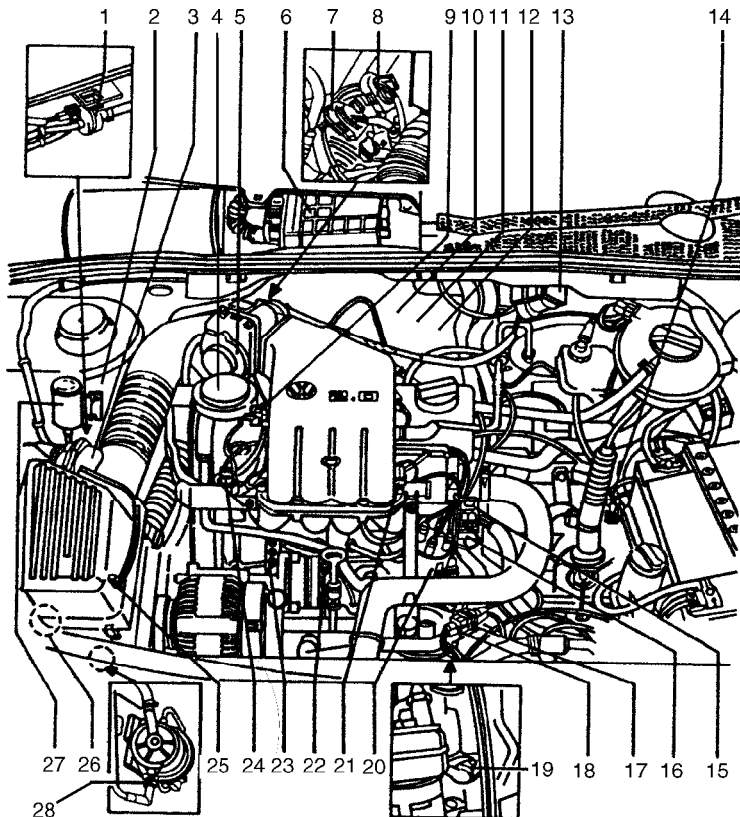

1. EVAP Canister Purge Regulator Valve
2. EGR Vacuum Regulator Valve (1995)
3. Mass Air Flow Sensor
4. Throttle Position Sensor (1995)
5. Throttle Valve Control Module (1996)
6. Engine Control Module
7. Heated Oxygen Sensor Connector (1996)
8. Heated Oxygen Sensor Connector (1996)
9. Intake Air Temperature Sensor
10. Idle Air Control Valve (1995)
11. EGR Temperature Sensor (1995)
12. EGR Valve (1995)
13. Ignition Coil
14. Vehicle Speed Sensor
15. Engine Coolant Temperature Sensor
16. Central Connector
17. Knock Sensor Connector (3-Pin)
18. Engine Speed Sensor Connector (3-Pin)
19. Engine Speed Sensor
20. Distributor (Camshaft Position Sensor)
21. Fuel Injectors
22. Knock Sensor 1
23. Ground
24. Fuel Pressure Regulator
25. Temperature Regulator Thermal Vacuum Valve
26. EVAP Canister
27. Leak Diagnosis Pump Filter (1996)
28. Leak Diagnosis Pump (1996)

96F03794

Vehicle Speed Sensor

Left side of engine
compartment, below battery.

[illegible]

SOLENOID & SOLENOID VALVES

[illegible]

Component

Component Location

[illegible]

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 16)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, August 19, 1999 11:19PM

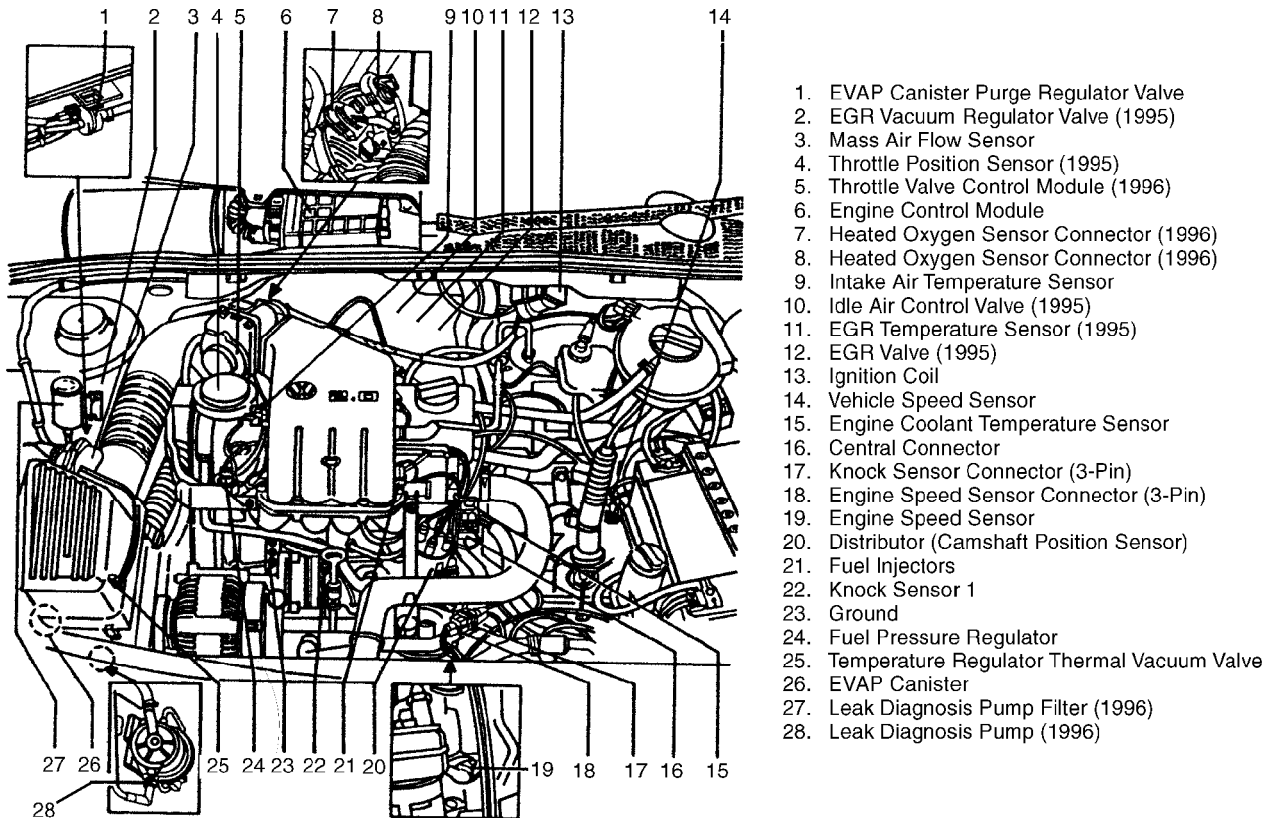

96F03794


EVAP Canister Purge Regulator Valve

On right side of engine compartment.

Fresh Air & Recirculating Flap Two-Way Valve

Rear of engine compartment.

Thursday, August 19, 1999 11:19PM

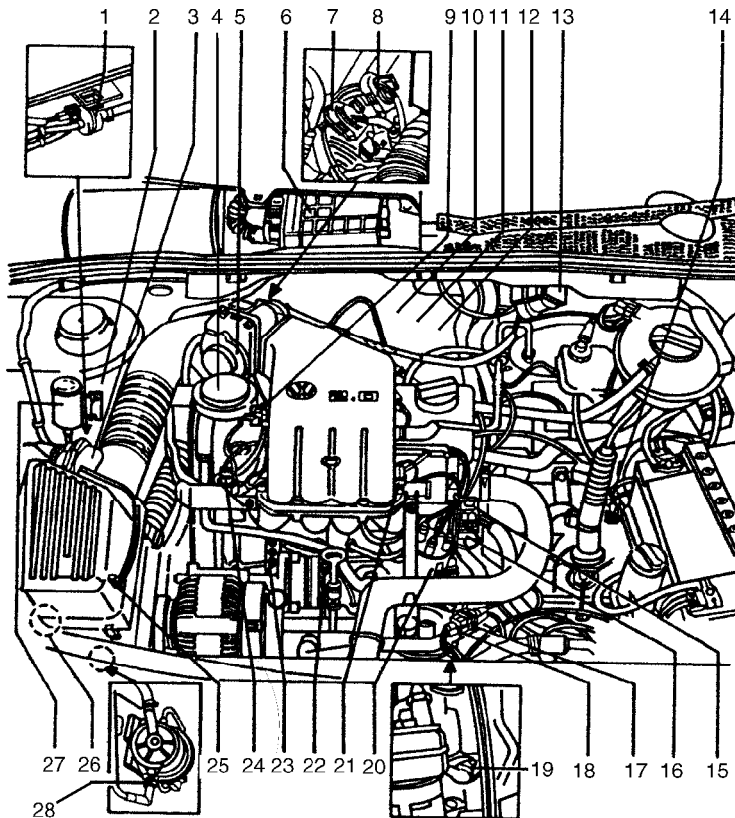

1. EVAP Canister Purge Regulator Valve
2. EGR Vacuum Regulator Valve (1995)
3. Mass Air Flow Sensor
4. Throttle Position Sensor (1995)
5. Throttle Valve Control Module (1996)
6. Engine Control Module
7. Heated Oxygen Sensor Connector (1996)
8. Heated Oxygen Sensor Connector (1996)
9. Intake Air Temperature Sensor
10. Idle Air Control Valve (1995)
11. EGR Temperature Sensor (1995)
12. EGR Valve (1995)
13. Ignition Coil
14. Vehicle Speed Sensor
15. Engine Coolant Temperature Sensor
16. Central Connector
17. Knock Sensor Connector (3-Pin)
18. Engine Speed Sensor Connector (3-Pin)
19. Engine Speed Sensor
20. Distributor (Camshaft Position Sensor)
21. Fuel Injectors
22. Knock Sensor 1
23. Ground
24. Fuel Pressure Regulator
25. Temperature Regulator Thermal Vacuum Valve
26. EVAP Canister
27. Leak Diagnosis Pump Filter (1996)
28. Leak Diagnosis Pump (1996)

96F03794

Temperature Regulator
Thermal Vacuum Valve

Right front corner of engine compartment.

[illegible]

SWITCHES

[illegible]

Component	Component Location
1. Main Body	1. Main Body
2. Base	2. Base
3. Top Cover	3. Top Cover
4. Side Panel	4. Side Panel
5. Front Panel	5. Front Panel
6. Back Panel	6. Back Panel
7. Internal Frame	7. Internal Frame
8. External Frame	8. External Frame
9. Support Structure	9. Support Structure
10. Mounting Bracket	10. Mounting Bracket
11. Fastener	11. Fastener
12. Sealant	12. Sealant
13. Gasket	13. Gasket
14. O-ring	14. O-ring
15. Bolt	15. Bolt
16. Nut	16. Nut
17. Washer	17. Washer
18. Spacer	18. Spacer
19. Pin	19. Pin
20. Rivet	20. Rivet
21. Screw	21. Screw
22. Plug	22. Plug
23. Cap	23. Cap
24. End Cap	24. End Cap
25. Flange	25. Flange
26. Bracket	26. Bracket
27. Arm	27. Arm
28. Lever	28. Lever
29. Handle	29. Handle
30. Knob	30. Knob
31. Button	31. Button
32. Switch	32. Switch
33. Plug	33. Plug
34. Connector	34. Connector
35. Cable	35. Cable
36. Wire	36. Wire
37. Tube	37. Tube
38. Pipe	38. Pipe
39. Hose	39. Hose
40. Belt	40. Belt
41. Strap	41. Strap
42. Rope	42. Rope
43. Cord	43. Cord
44. Chain	44. Chain
45. Link	45. Link
46. Pin	46. Pin
47. Bolt	47. Bolt
48. Nut	48. Nut
49. Washer	49. Washer
50. Spacer	50. Spacer
51. Pin	51. Pin
52. Rivet	52. Rivet
53. Screw	53. Screw
54. Plug	54. Plug
55. Cap	55. Cap
56. End Cap	56. End Cap
57. Flange	57. Flange
58. Bracket	58. Bracket
59. Arm	59. Arm
60. Lever	60. Lever
61. Handle	61. Handle
62. Knob	62. Knob
63. Button	63. Button
64. Switch	64. Switch
65. Plug	65. Plug
66. Connector	66. Connector
67. Cable	67. Cable
68. Wire	68. Wire
69. Tube	69. Tube
70. Pipe	70. Pipe
71. Hose	71. Hose
72. Belt	72. Belt
73. Strap	73. Strap
74. Rope	74. Rope
75. Cord	75. Cord
76. Chain	76. Chain
77. Link	77. Link
78. Pin	78. Pin
79. Bolt	79. Bolt
80. Nut	80. Nut
81. Washer	81. Washer
82. Spacer	82. Spacer
83. Pin	83. Pin
84. Rivet	84. Rivet
85. Screw	85. Screw
86. Plug	86. Plug
87. Cap	87. Cap
88. End Cap	88. End Cap
89. Flange	89. Flange
90. Bracket	90. Bracket
91. Arm	91. Arm
92. Lever	92. Lever
93. Handle	93. Handle
94. Knob	94. Knob
95. Button	95. Button
96. Switch	96. Switch
97. Plug	97. Plug
98. Connector	98. Connector
99. Cable	99. Cable
100. Wire	100. Wire
101. Tube	101. Tube
102. Pipe	102. Pipe
103. Hose	103. Hose
104. Belt	104. Belt
105. Strap	105. Strap
106. Rope	106. Rope
107. Cord	107. Cord
108. Chain	108. Chain
109. Link	109. Link
110. Pin	110. Pin
111. Bolt	111. Bolt
112. Nut	112. Nut
113. Washer	113. Washer
114. Spacer	114. Spacer
115. Pin	115. Pin
116. Rivet	116. Rivet
117. Screw	117. Screw
118. Plug	118. Plug
119. Cap	119. Cap
120. End Cap	120. End Cap
121. Flange	121. Flange
122. Bracket	122. Bracket
123. Arm	123. Arm
124. Lever	124. Lever
125. Handle	125. Handle
126. Knob	126. Knob
127. Button	127. Button
128. Switch	128. Switch
129. Plug	129. Plug
130. Connector	130. Connector
131. Cable	131. Cable
132. Wire	132. Wire
133. Tube	133. Tube
134. Pipe	134. Pipe
135. Hose	135. Hose
136. Belt	136. Belt
137. Strap	137. Strap
138. Rope	138. Rope
139. Cord	139. Cord
140. Chain	140. Chain
141. Link	141. Link
142. Pin	142. Pin
143. Bolt	143. Bolt
144. Nut	144. Nut
145. Washer	145. Washer
146. Spacer	

[illegible]

A/C Pressure Switch	On right side of engine compartment.
---------------------	--------------------------------------

Ambient Temperature Switch Near horn.

[illegible]

MISCELLANEOUS

[illegible]

Component	Component Location
-----------	--------------------

A

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 18)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, August 19, 1999 11:19PM

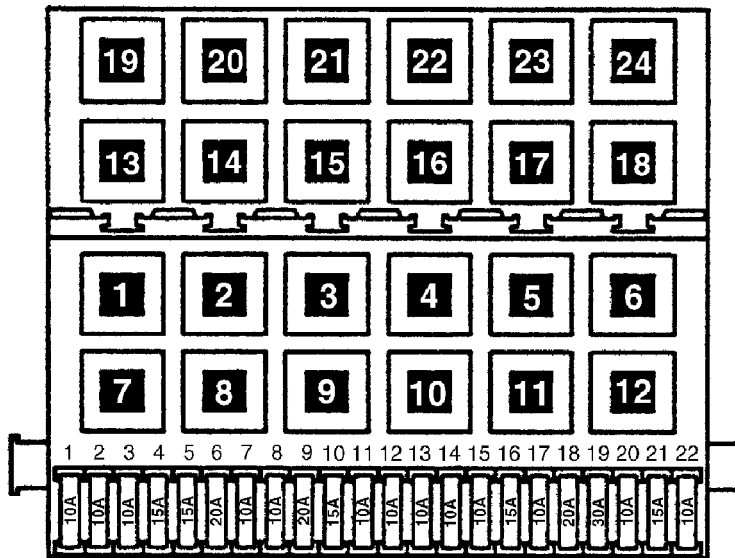

Fuse/Relay Panel


1. A/C Relay
2. Rear Window Wiper/Washer Relay
3. ECM Power Supply Relay
4. Load Reduction Relay
5. Not Used
6. Emergency Flasher Relay
7. Not Used
8. Wiper/Washer Intermittent Relay
9. Seat Belt Warning System Relay
10. Fog Lamp Relay
11. Dual-Horn Relay or Bridge For Horn
12. Fuel Pump Relay
13. Heated Oxygen Sensor Control Module
14. Park/Neutral Position Relay
15. ABS Hydraulic Pump Relay
16. ABS Relay

96D03793
Bridge For Horn

On fuse/relay panel.

Data Link Connector (DLC)

Behind center of dash.

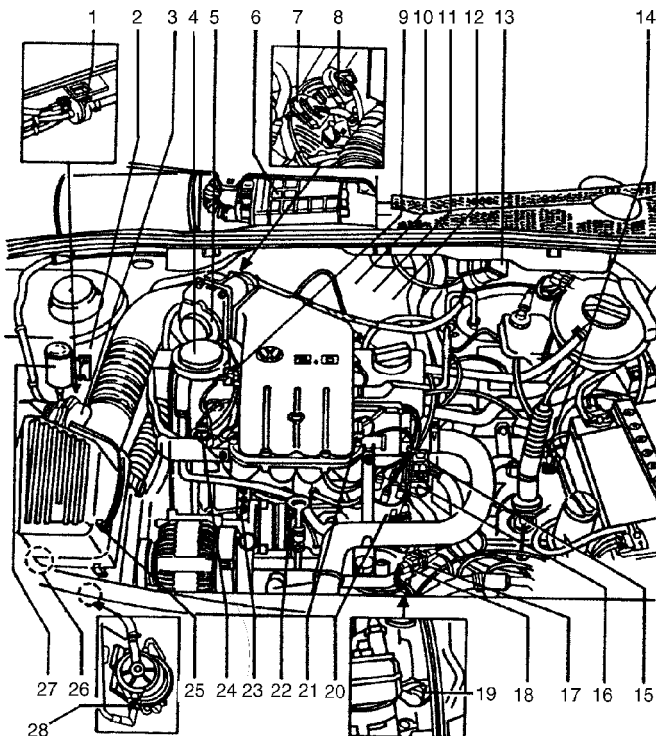

1. EVAP Canister Purge Regulator Valve
2. EGR Vacuum Regulator Valve (1995)
3. Mass Air Flow Sensor
4. Throttle Position Sensor (1995)
5. Throttle Valve Control Module (1996)
6. Engine Control Module
7. Heated Oxygen Sensor Connector (1996)
8. Heated Oxygen Sensor Connector (1996)
9. Intake Air Temperature Sensor
10. Idle Air Control Valve (1995)
11. EGR Temperature Sensor (1995)
12. EGR Valve (1995)
13. Ignition Coil
14. Vehicle Speed Sensor
15. Engine Coolant Temperature Sensor
16. Central Connector
17. Knock Sensor Connector (3-Pin)
18. Engine Speed Sensor Connector (3-Pin)
19. Engine Speed Sensor
20. Distributor (Camshaft Position Sensor)
21. Fuel Injectors
22. Knock Sensor 1
23. Ground
24. Fuel Pressure Regulator
25. Temperature Regulator Thermal Vacuum Valve
26. EVAP Canister
27. Leak Diagnosis Pump Filter (1996)
28. Leak Diagnosis Pump (1996)

96F03794
Fuel Pressure Regulator

Right center of engine compartment.

ELECTRICAL COMPONENT LOCATOR - 2.0L 4-CYL


Article Text (p. 19)

1996 Volkswagen Golf

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, August 19, 1999 11:19PM

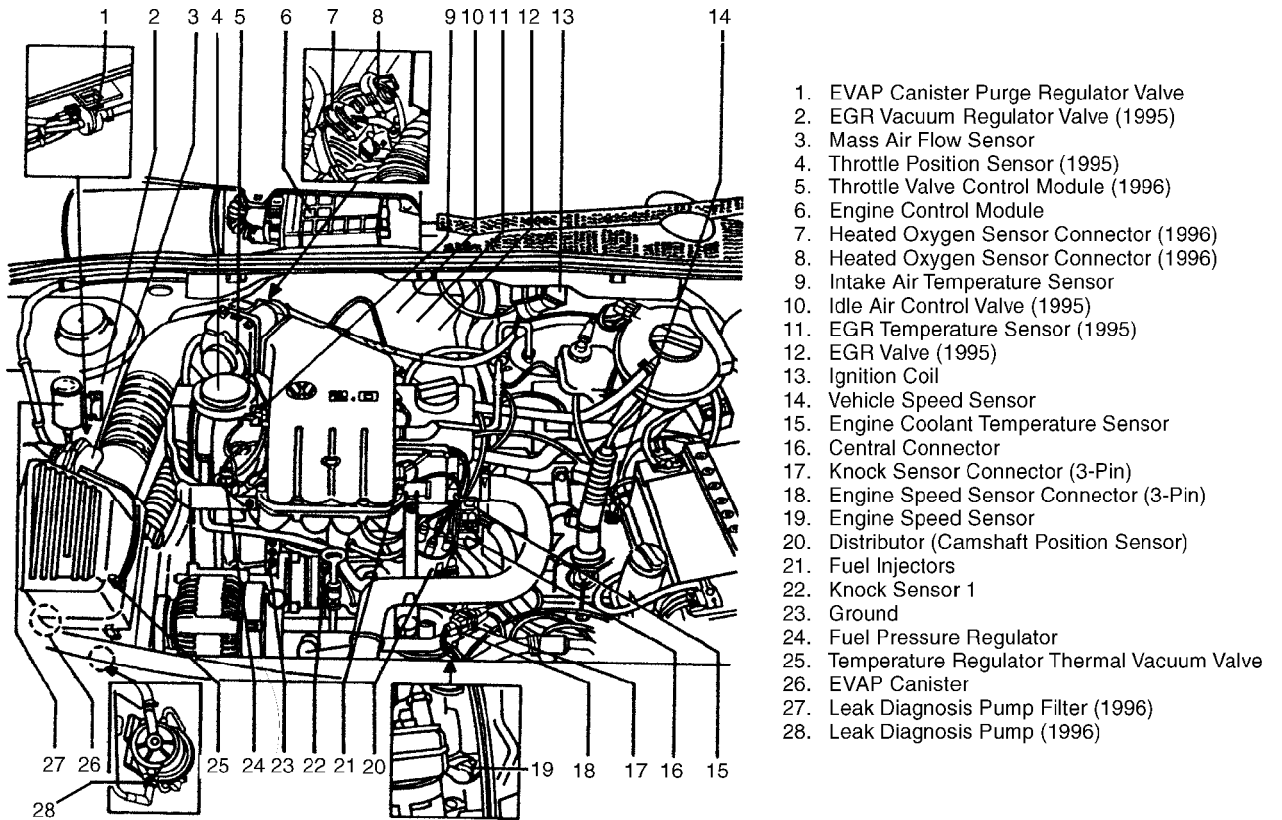

Ignition Coil

96F03794

Left rear of engine
compartment, on firewall.

AA

END OF ARTICLE