
### **ELECTRICAL SYSTEM**

## 13. Fuse/Relay Panel 1989 through 1992 (from VIN 1G-KW400 001) Jetta fuse/relay panel

Fig. 13-4. January 1989 (VIN 1G-KW400 001) through 1992 Jetta fuse/relay panel

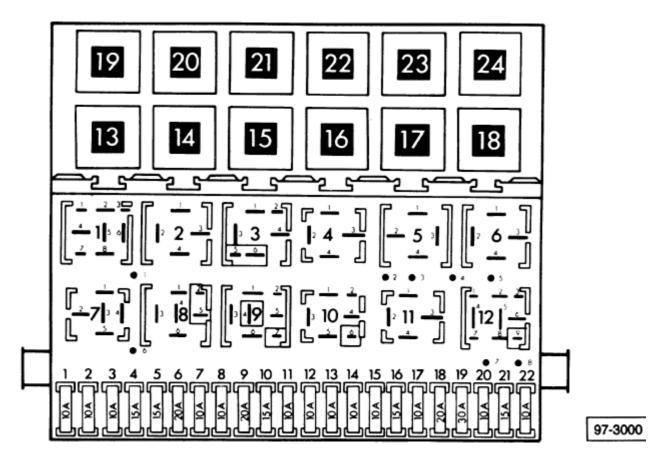

#### **Fuses**

Fuse No. Description		<b>Ampere Rating</b>
1	Headlight, low beam, left	10
2	Headlight, low beam, right	10
3	Instrument panel lights, license plate lights	10
4	Glove compartment light	15
5	Wiper/washer	15
6	Fresh air blower 16-valve only: Air conditioning	20
7	Taillights, side marker light, right	10
8	Taillights, side marker light, left	0
9	Rear window defogger	20
10	2.0 16-valve only: Fog lights	15
11	Headlight, high beam, left, High beam	10

	indicator light	
12	Headlight, high beam, right	10
13	Horn 16-valve only: Radiator cooling fan	10
14	Back-up lights, washer nozzle heaters	10
15	2.0 16-valve only: Engine electronics, stabilizer valve, cold start valve	10
16	Instrument panel warning lights, 16-valve only: Multi function indicator	15
17	Emergency flasher switch, turn signals	10
18	Fuel pump, oxygen sensor heater	20
19	Radiator cooling fan, air conditioning	30
20	Brake lights, cruise control	10
21	Interior lights, digital clock 16-valve only: Luggage compartment light, multi function indicator, central locking	15
22	Radio, cigarette lighter	10
Relays		
Relay No	. Description	
1	Air conditioning	
2	Open	
3	Digifant control unit (except 16-valve)	
4	Load reduction relay	
5	Low coolant level control unit or Open	
6	Emergency flashers	
7	Open	
8	Intermittent wipers	
9	Seat belt warning system control unit	
10	Fog lights	
11	Horn	
12	Fuel pump (except diesel)Glow plugs (die	esel)
13	Radiator cooling fan after run (except 16- relay	-valve)2.0 16-valve: Starter interlock
14	Automatic trans., coolant temperature inc 2.0 16-valve)2.0 16-valve: Radiator cooli	
15	ABS pump relay	
16	ABS relay	
17	Heated seat control unit, driver	
18	Heated seat control unit, passenger, or p	ower seat circuit breaker
19	Automatic transmission	
20	Open	
21	Power window relay, ABS hydraulic pum	p fuse
22	ABS valves fuse	
23	Air conditioning, power seat fuse	


24

Power window fuse

### **ELECTRICAL SYSTEM**

# 13. Fuse/Relay Panel 1990 through 1992 Golf and GTI fuse/relay panel

Fig. 13-10. 1990 through 1992 Golf and GTI fuse/relay panel.

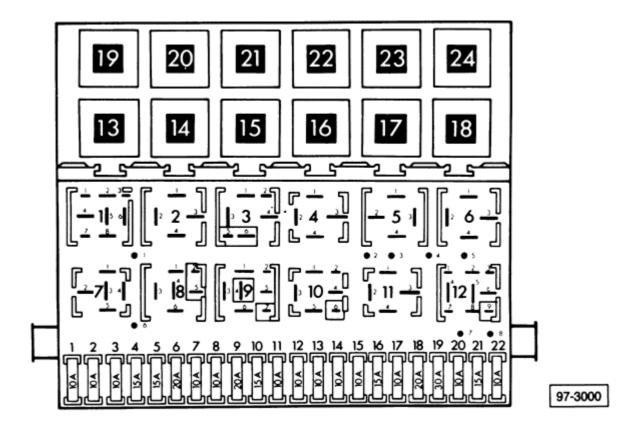

### **Fuses**

Fuse No.	Description	<b>Ampere Rating</b>
1	Headlight, low beam, left	10
2	Headlight, low beam, right	10
3	Instrument panel lights, license plate lights	10
4	Glove compartment light, rear window wiper	15
5	Windshield wiper/washers	15
6	Fresh air blower 16-valve only: Air conditioning	20
7	Taillights, side marker light, right	10
8	Taillights, side marker light, left	10
9	Rear window defogger	20
10	Fog lights	15
11	Headlight, high beam, left, High beam indicator light	10
12	Headlight, high beam, right	10
10	Harn	

13	16 valve only. Redictor earling for	10
4.4	16-valve only: Radiator cooling fan	10
14	Back-up lights, washer nozzle heaters	10
15	16-valve only: Engine electronics, idle stabilizer valve, cold start valve	10
16	Instrument panel warning lights, 16-valve only: multi function indicator	15
17	Emergency flasher switch, turn signals	10
18	Fuel pump, oxygen sensor heater	20
19	Radiator cooling fan, air conditioning	30
20	Brake lights, cruise control	10
21	Interior lights, digital clock	
	16-valve only: Luggage compartment light, multi function indicator, central locking	15
22	Radio, cigarette lighter	10
	, 6	
Relays		
Relay No.	Description	
1	Air conditioning	
2	Rear window wiper/washer	
3	Digifant control unit (except 16-valve)	
4	Load reduction relay	
5	Intermittent wiper or Open	
6	Emergency flasher	
7	Fog lights or Open	
8	Intermittent wiper or Open	
9	Seat belt warning system	
10	Fog lights or Open	
11	Horn	
12	Fuel pump (except diesel)	
	Glow plugs (diesel only)	
13	Radiator cooling fan after run control u	init (except diesel)
14	Starter interlock (except diesel)	, , ,
	Diesel: Air conditioning fuse (20A)	
15	Open	
16	Open	
17	16-valve only: Power window relay	
18	Daytime driving lights (Canada only)	
19	Automatic transmission	
20	Open	
21	Power window relay or Open	
22	Open	

Air conditioning, power seat fuse

23

16-valve only: Air conditioning, heater fuse

24 Power window fuse